



\$ 250⁰⁰

INSTALLATION OPERATION AND MAINTENANCE

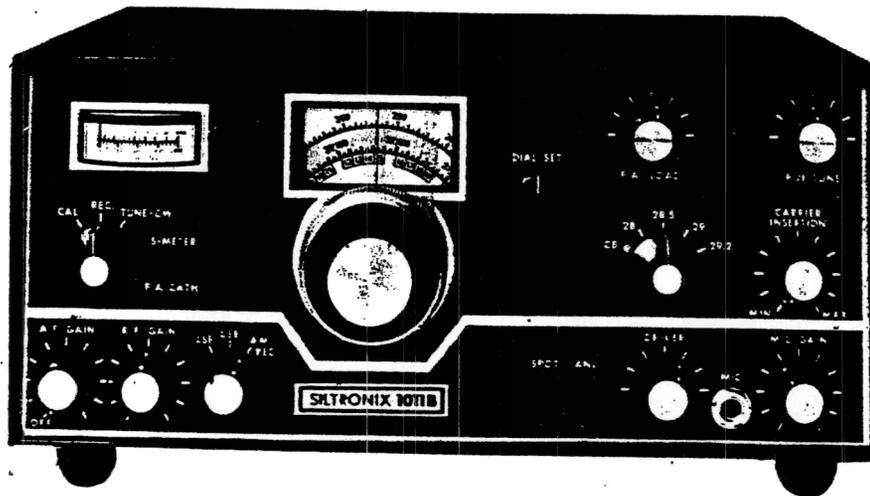

SILTRONIX MODEL 1011B

INSTALLATION OPERATION AND MAINTENANCE SILTRONIX MODEL 1011B

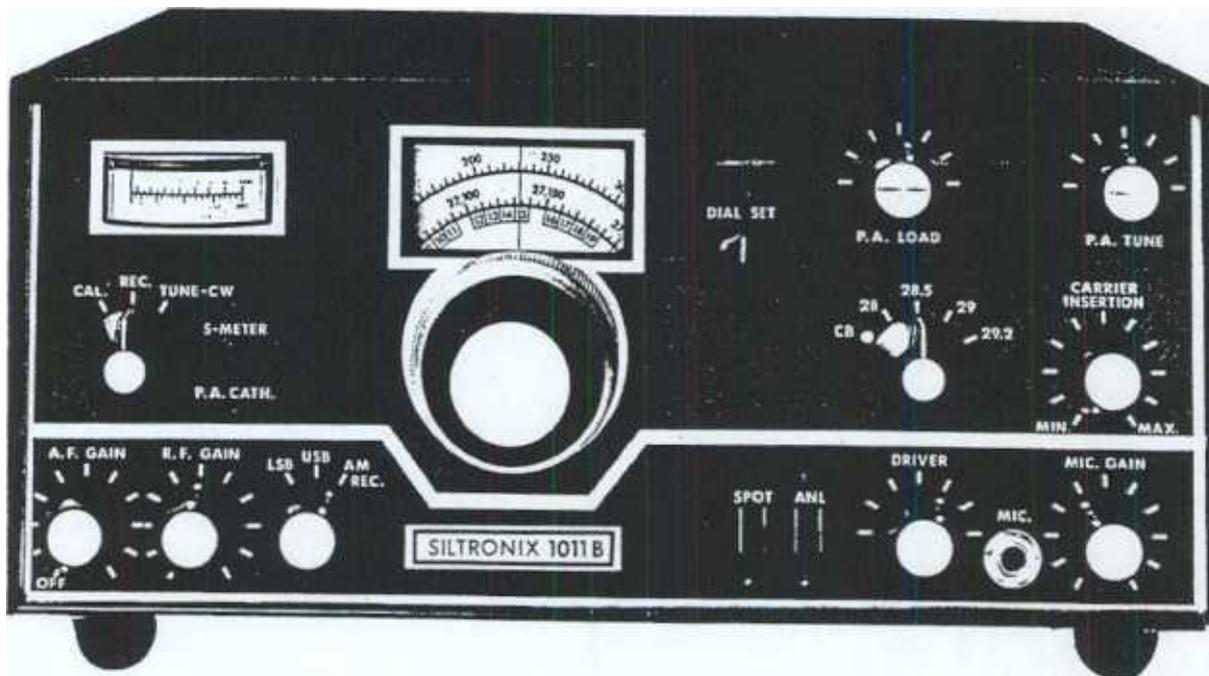

INTRODUCTION

The Siltronix Model 1011B Single Sideband Transceiver is designed to be used in SSB, AM, or CW modes in the 10 meter amateur radio band. In addition, the 1011B is also a tunable receiver in the CB band.

Power input exceeds 260 watts, P.E.P., on single sideband, 60 watts on AM, and 180 watts on CW. The Model 1011B includes automatic gain control (AGC), automatic level control (ALC), and grid block keying.

The internal AC power supply permits fixed station or portable operation wherever 117 volts, 50-60 Hertz is available.

Export models for 208-220-240 volts are available on special order.

For 12-14 volts DC operation in mobile, marine or portable applications, a DC converter unit, model 14A is available. It attaches to the back of the 1011B in place of the AC power cord connector. Its dimensions are only 1 1/2 x 3 x 4 in.

The Model 1011B generates a single sideband signal by means of a crystal lattice filter, and the transceiver automatically tunes the transmitter to the received frequency. Provisions are included in the transceiver for operation on either upper or lower sideband.

SPECIFICATIONS

FREQUENCY RANGES

28.0-28.5 MHz
28.5-29.0 MHz
29.0-29.5 MHz
29.2-29.7 MHz
26.96-27.26 MHz (Receive only)

POWER INPUT

Single Sideband, Suppressed Carrier:
260 watts, P.E.P. minimum
CW: 180 watts, DC input
AM: (Single Sideband with Carrier):
60 watts DC input

DISTORTION

Distortion products down approx. 30 db.

UNWANTED SIDEBAND SUPPRESSION

Unwanted sideband down more than 50 db.

CARRIER SUPPRESSION

Carrier suppression greater than 50 db.

RECEIVER SENSITIVITY

Less than 0.5 microvolt at 50 ohms impedance for signal-plus-noise to noise ratio of 10 db.

AUDIO OUTPUT AND RESPONSE

Audio output, 3 watts to 3.2 ohm load. Response essentially flat from 300 to 3000 cps in both receive and transmit.

TRANSMITTER OUTPUT

Wide-range Pi-network output matches resistive loads from 50 to 75 ohms.

METERING

Power amplifier cathode current 0-400 ma. on transmit, S-Meter 0-70 db over S9 on receive, Relative Output in TUNE-CW.

FRONT PANEL CONTROLS

A.F. GAIN, R.F. GAIN, Sideband Selector, Function Switch (CAL. REC. TUNE-CW), Meter Switch, Tuning Dial, Dial Set, SPOT Switch, ANL Switch, P.A. LOAD, P.A. TUNE, Band Switch, CARRIER INSERTION, DRIVER Control, MIC jack, MIC-GAIN.

REAR PANEL CONTROLS AND CONNECTIONS

P.A. BIAS Potentiometer, AUX RELAY jack, CW KEY jack, Outboard VFO Connector, HEAD PHONES jack, Fuse Holder, Antenna Connector, Jones plug Power connector, S-Meter Zero.

OTHER CONTROLS AND CONNECTIONS

Carrier Balance Control - Located on bottom Cover.
VOX CONNECTOR - Located on side of the chassis.

VACUUM TUBE COMPLEMENT

V1	12BA6	VFO Amplifier
V2	12BE6	Transmitter Mixer
V3	6GK6	Driver
V4	6LF6	Power Amplifier
V5	6BZ6	Receiver RF Amplifier
V6	12BE6	Receiver Mixer
V7	12BA6	First IF Amplifier
V8	12BA6	Second IF Amplifier
V9	12AX7	Product Detector/Receive Audio
V10	6AV6	AGC Amplifier/Rectifier
V11	6GW8	AF Output
V12	12BA6	100 KC Calibrator
V13	6JH8	Balanced Modulator
V14	12AX7	Microphone Amplifier

TRANSISTOR COMPLEMENT

Q1	2N706	Oscillator
Q2	2N5130	Buffer
Q3	2N706	Carrier Oscillator

POWER REQUIREMENTS

117 VAC, 50-60 Hz at 4 amps. (208-220-240 volt, 50-60 Hz at 2.5 amps., export model). 12-14 volts DC operation with model 14-A converter unit plugged into back of 1011B. Current drain: 8 amps, receive mode. 12 amps average with voice modulation, 25 amps maximum in TUNE position.

DIMENSIONS

Height	5½ in.
Width	13 in.
Depth	11 in.

WEIGHT

Weight	24 lbs.
--------	---------

INSTALLATION

GENERAL

The installation of the Siltronix 1011B is not at all difficult, and it involves only the placement of the transceiver in its operational area (fixed or mobile); connection of power (either 117 volts AC, or 12 volts DC); and the connection of an antenna. The following paragraphs are therefore devoted to the installation requirements involving microphones, fixed and mobile operation, and recommended antenna types. Before actual installation, be sure to check for possible shipment damage. Remove the cabinet (three screws on each side), and check to make sure that all tubes are firmly in place. Remove packing from around the P.A. tube.

FIXED INSTALLATION

Locate the 1011B in an area which is well ventilated and which provides complete operational freedom of the front panel controls. Connect the AC power cord to the 12 pin Jones connector on the rear panel. If the 1011B is a 117 volt model, plug the power cord into a standard 117 volt 50-60 Hz outlet having a capacity of at least 10 amps. If the 1011B is an Export model, it should be first set to the proper voltage tap: 208, 220, or 240 volts, 50-60 Hz. Remove the cabinet, and locate the terminal strip near the top of the power transformer. There are 3 terminal lugs and a decal which indicates the voltage tap for each. Connection has been made to the 220 volt tap at the factory. If your supply voltage is 208 or 240 volts, unsolder the red wire and move it accordingly.

FIXED ANTENNA

A standard PL-239 coax connector plug will fit the antenna connector on the rear panel of the 1011B. For feed line runs up to 50 feet, RG58 or RG59 is recommended. For longer runs, RG8 or RG11 produces less line loss, particularly on 10 meters.

Any of the common antenna systems designed for use on the 10 meter amateur band will work well with the 1011B. However, the amateur should consider an antenna system which best fits his operational requirements. For example, a rotatable beam antenna is usually best suited for DX operation. Methods for constructing antennas and antenna tuners are described in detail in the ARRL Antenna Handbook and similar publications. It is recommended that these publications be consulted during the design of any antenna system.

MOBILE INSTALLATION

Many different methods of mobile installation are possible, and it is expected that hams will find methods which are best suited for their installation requirements. Siltronix has available a Mobile Mounting Kit which is suitable for under-the-dash installations. Figure 1 shows the recommended mounting methods using this kit.

DC CONVERTER, MODEL 14A

For 12-14 volt DC operation in mobile installations, it will be necessary to use the 14A converter, which plugs directly into the back of the 1011B in place of the AC power cord.

MOBILE ANTENNAS

The standard type mobile antennas designed for 10 meters or CB band will perform well with the 1011B. Generally speaking, a full length 8 or 9 foot whip will be more efficient than the shorter inductively loaded types.

MICROPHONE

The microphone input is designed for high impedance microphones only. The choice of microphone is important for good speech quality, and should be given serious consideration. The crystal lattice filter in the transceiver provides all the restriction necessary on audio response, and further restriction in the microphone is not required. It is more important to have a microphone with a smooth, flat, response throughout the speech range. The microphone plug must be a standard ¼ in. diameter three contact type. The tip connection is for push-to-talk relay control, the ring connector is the microphone terminals, and the sleeve is the common chassis ground. The microphone manufacturer's instructions should be followed in connecting the microphone cable to the plug. Either hand-held or desk type microphone with push-to-talk control will provide a suitable installation. For VOX operation, this feature may be disabled, if desired, by opening the microphone case and permanently connecting the contacts which control the microphone.



CONTROL FUNCTIONS, FRONT PANEL

POWER ON-OFF SWITCH (On AF GAIN control)
Turns power supply On and OFF.


FUNCTION SWITCH (CAL. REC. TUNE-CW)

Calibrate — All voltages are applied to receiver. Grounds cathode of V12. Dial adjustment can be made at any 100 KHz point on the dial.

Receive — All voltages are applied to receiver. Normal position for Push-to-talk or VOX operation of transceiver.

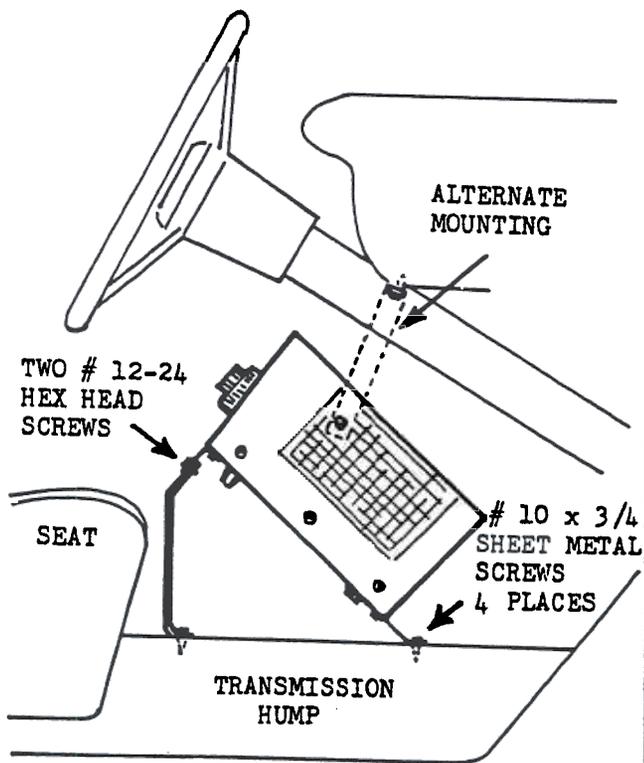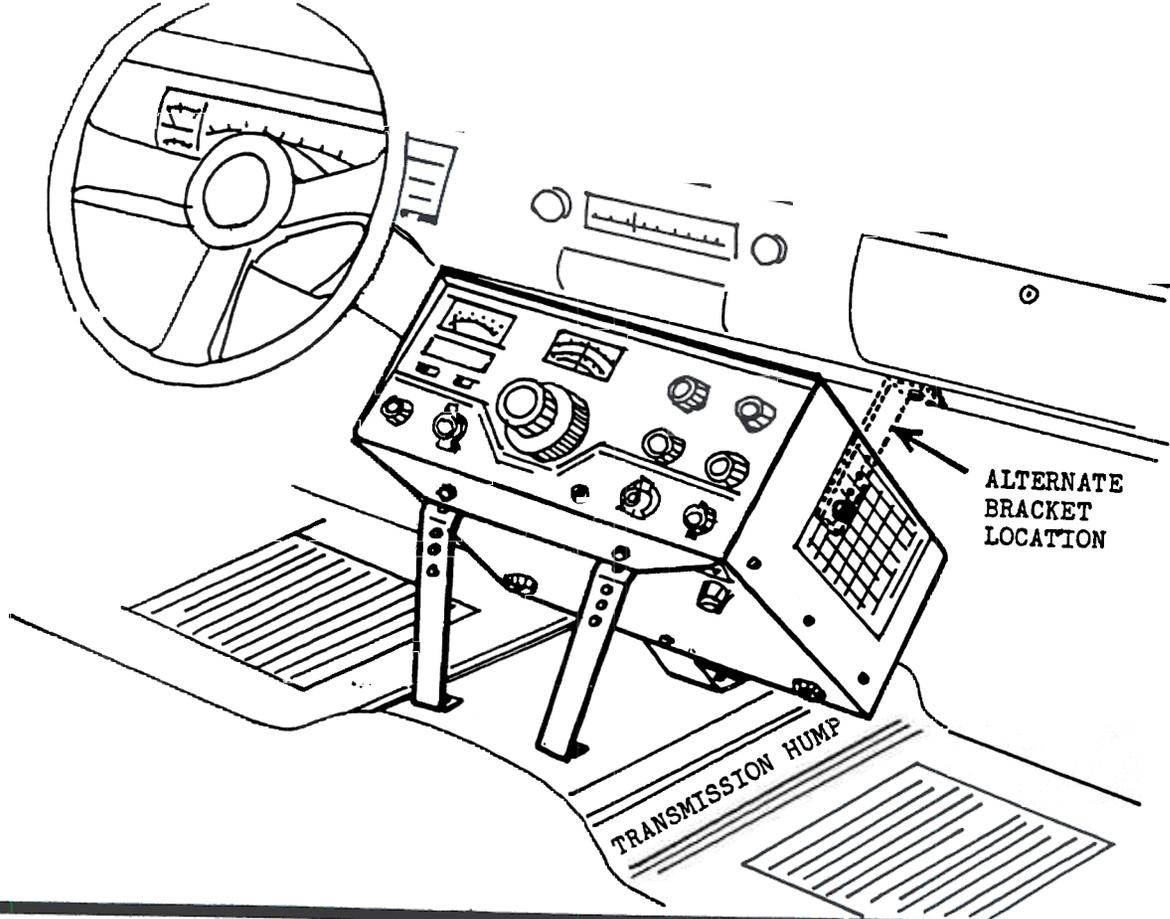

MOBILE MOUNTING, SIDE VIEW

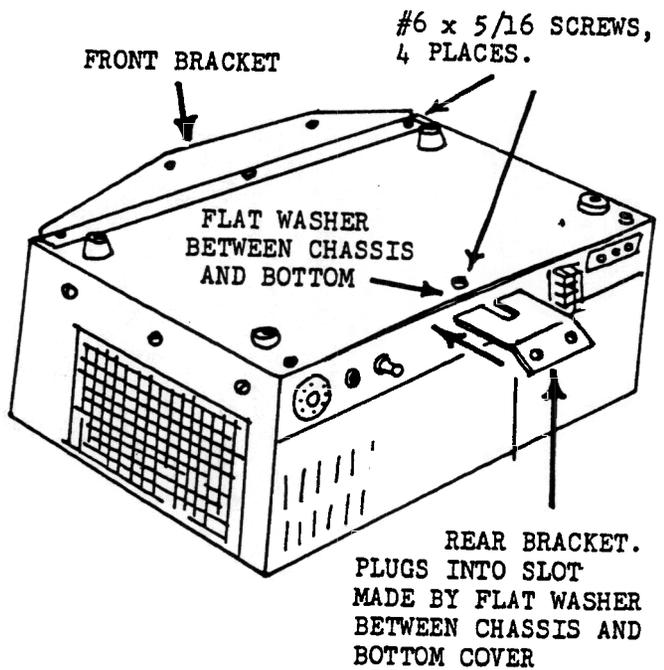

TRANSCEIVER, BOTTOM VIEW

FIGURE 1. MOBILE MOUNTING ON TRANSMISSION HUMP UNDER DASH

TUNE-CW – Transmitting circuits are energized. C1502 is disconnected from ground, shifting the carrier frequency into the filter passband. Carrier is fully inserted. P.A. cathode resistor, R406 is switched in the circuit, reducing input power. Transmitter is tuned in this position. CW transmissions made in this position.

MIC. GAIN

Controls potentiometer R1404 in the grid of V14A, and controls amount of audio to the balanced modulator.

R.F. GAIN

Controls variable resistor R505, common in the grids of Receiver Mixer, V6; RF amplifier, V5; LF. Amplifiers, V7 and V8.

A.F. GAIN

Controls potentiometer R1101 in grid circuit of AF output, V11, and controls audio volume.

MAIN TUNING

Controls C1608 in frequency determining tank circuit of VFO.

DRIVER

Controls C2A and C2B in plate tanks of transmitter Mixer and Driver.

P.A. TUNE

Controls C407 in Pi-network to tune final power amplifier plate to resonance.

P.A. LOAD

Controls C408 in Pi-network to match impedance of output load. Tunes input to Receiver R.F. Amplifier.

BAND SWITCH

Switches tank coils and associated capacitors in VFO, VFO Amplifier, Driver, and Transmit Mixer.

Sideband Selector Switch

LSB – Receive and Transmit on Lower Sideband.
USB – Receive and Transmit on Upper Sideband.
AM REC. – Receive AM signals. (Insert carrier with Carrier Insertion control to transmit.)

ANL Switch

Automatic Noise Limiter

SPOT Switch

Inserts carrier for AM tuning in REC position.

Meter Switch

Reads cathode current in P.A. CATHODE position. Reads S-UNITS in S-METER position. Reads RELATIVE OUTPUT in S-METER position when Function Switch is in TUNE-CW position.

DIAL SET

Dial adjustment can be made at any 100 KHz point with Calibrator on.

MIC

Microphone plugs into this jack.

CONTROL FUNCTIONS, REAR PANEL

P.A. BIAS

Adjust idling current for P.A. Tube. (40 ma.)

AUX RELAY

12 volts DC for auxiliary relay control.

CW KEY

CW key plugs into this jack.

ANTENNA

Antenna feedline (50 - 75 ohm) plugs into this connector.

FUSE HOLDER

4 amp fuse.

EXT OSC

Model 508 or 510X external VFO connection.

HEAD PHONES

Headphones plug into this jack. Disconnects internal speaker.

S-METER ZERO

Adjust S-Meter to zero with antenna disconnected.

POWER CONNECTOR

AC power cord plugs into this connector. Model 14A DC converter plugs in to this connector for mobile operation.

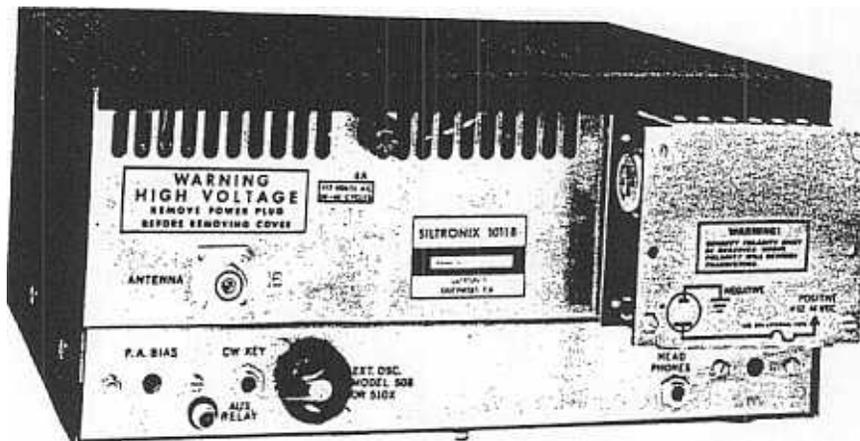


FIGURE 2. SILTRONIX MODEL 1011B, REAR VIEW.

OPERATION

Before connecting any cables to the Siltronix 1011B transceiver, perform the following steps:

- ① Locate the P.A. compartment and remove the packing material from the P.A. tube.
- ② Rotate the Function Switch to the REC. position.
- ③ Rotate the AF GAIN control counter clockwise to operate the power switch to the OFF position.
- ④ Rotate the CARRIER INSERTION control full counter clockwise to the minimum position.

CONNECTIONS

- ① Connect a wire from earth ground to the ground stud located on the rear of the chassis. This is not essential, but is strongly recommended.
- ② Connect a 50 or 75 ohm antenna feed-line to the coaxial connector on rear panel. A 50 ohm dummy load may also be used.
- ③ Connect the AC power cable to the Jones connector on the rear panel.
- ④ Connect the AC power cable to the proper voltage source.

WARNING

Dangerous high voltage is present on the plate of the power amplifier whenever the power supply is energized.

RECEIVE OPERATION

- ① Rotate the A.F. GAIN control clockwise to about the 3 o'clock position. The power switch will operate, applying voltage to the transceiver. The dial and meter lights should illuminate.
- ② Wait approximately one minute to allow the tube filaments to reach operating temperature. During this waiting period, perform the following steps:
 - a. Rotate Frequency Range switch to desired range.
 - b. Rotate Tuning Dial to desired frequency.
 - c. Rotate MIC. GAIN fully counter clockwise.
 - d. Set P.A. TUNE control to 12 o'clock position.
 - e. Set DRIVER control to 12 o'clock position.
 - f. Set P.A. LOAD control to 12 o'clock position.
 - g. Rotate RF GAIN control to 3 o'clock position.
 - h. Place SIDEBAND SELECTOR switch in USB mode.

- ③ Carefully adjust the DRIVER and the P.A. TUNE controls for maximum receiver noise.

NOTE

The DRIVER control resonates the transmitter driver stages and the receiver RF amplifier plate circuit. The P.A. TUNE and P.A. LOAD controls adjust the input and output capacitors in the transmitter power amplifier final plate circuit, as well as the receiver RF amplifier grid circuit. Proper adjustment of these controls in the receive position will result in approximately resonant conditions in the transmitter stages.

RECEIVER TUNING (SSB)

Precise tuning of a single sideband signal is very important. Do not be satisfied to merely tune until the voice can be understood, but take the extra care of setting the dial to the exact spot where the voice sounds natural. Above all, avoid the habit of tuning so that the voice is pitched higher than normal. This is an unfortunate habit practiced by quite a number of operators.

The following points help to explain the effects of mistuning:

1. If you tune so the received voice is higher than normal pitch, you will then transmit off frequency, and your voice will sound lower than normal pitch to the other station. He will probably retune his dial to make you sound right. If you keep this up, you will gradually waltz one another across the band. If both of you are mistuning to an unnatural higher pitch, you will waltz across the band twice as fast. (And someone will no doubt be accused of frequency drift.)

2. Mistuning results in serious harmonic distortion on the voice, and should be quite noticeable to the average ear. Some will claim that if they don't know how the other person's voice actually sounds, they can't tune him in properly, but this is not true. With a little practice, it will be fairly easy to tell. Some voices are relatively rich in harmonics, and are easier to tune in than a person with a "flat" voice. Also, a transmitter, which is being operated properly with low distortion will be easier to tune in than one which is being over-driven and is generating excessive distortion. There is no mistaking when you have a station tuned right on the nose. It will sound just like "AM" so to speak. Mainly, avoid the habit of tuning so everyone sounds higher than normal pitch, or like "Donald Duck". This is incorrect, unnecessary, and sounds terrible.

3. Your Siltronix 1011B will automatically transmit on exactly the same frequency as the one to which you are listening.

4. If it is desired to receive on Lower Sideband, rotate the **SIDEBAND SELECTOR** switch to the **LSB** position.

RECEIVER TUNING (AM)

Refer to the **RECEIVE OPERATION** paragraph above, and perform all the steps.

- ① After adjusting the **DRIVER** and the **P.A. TUNE** controls for maximum receiver noise, rotate the **SIDEBAND SELECTOR** switch to the **AM REC.** mode.
- ② Rotate the tuning dial until an AM signal is heard.
- ③ Place the **SPOT** switch in the **ON (UP)** position. This removes the bias from the carrier oscillator, allowing the carrier to be heard in the receiver.
- ④ Zero beat the carrier with the tuning dial.
- ⑤ Turn off the **SPOT** switch.
- ⑥ The AM station should be on frequency, with excellent voice reception.

TRANSMITTER TUNING

CAUTION

READ CAREFULLY. BE SURE THAT YOU UNDERSTAND AND REMEMBER THESE NOTES WHEN TUNING THE TRANSMITTER.

1. The most important detail to keep in mind when tuning the transmitter portion of your Siltronix 1011B is that the **P.A. TUNE** control must be resonated as quickly as possible.

2. The **P.A.** tube is dissipating all the power input when it is not in resonance, and can be permanently damaged in just a few seconds.

3. Once resonance has been established, the **P.A.** tube can operate at full power input for quite a while, although we recommend 30 seconds as a safe maximum. But it is most important to realize that the 30 second limit assumes that the **P.A. TUNE** control has been immediately resonated. This rule applies generally to all transmitters.

4. Do not tune more often than necessary. The **P.A.** tube will last for many months, or even years, with normal operation, but excessive tuning will shorten tube life.

TRANSMITTER TUNING STEPS

- ① Make the following preliminary adjustments:
 - a. Sideband selector switch in **USB** position.
 - b. Tuning dial to desired frequency.
 - c. **Mic Gain** at minimum.
 - d. **Carrier Insertion** to full **CCW (MIN)** position.
 - e. **Meter Switch** in **P.A. CATHODE** position.
 - f. **Function Switch** in **REC** position.
 - g. **P.A. BIAS** control on rear panel to full **CCW** position.
 - h. Microphone with press-to-talk switch plugged into **Mic Jack** on front panel.
- ② Press the **Mic** switch and observe the meter for any reading. Meter should read approximately 0. If the meter does not read approximately 0, it indicates that the **CARRIER** is not completely balanced out. Locate the **CARRIER BAL** hole on the bottom cover. With the **Mic** switch pressed, use an alignment tool and adjust the carrier balance pot until the meter "dips" at its lowest reading. This adjustment should not be required often.
- ③ Press the **Mic Switch** and with a screwdriver, adjust the **P.A. BIAS** control located on the rear panel, until the meter reads approximately 40 ma. **P.A. Idling** current. This point is indicated on the meter scale by a small triangular symbol. The permissible idling current range is 30 to 50 ma. If the idling current tends to creep upward slightly with warm-up, set it at 30 ma. Excessive creep indicates that the **P.A.** tube is gassy, and may need to be replaced soon. This adjustment should not be required often.
- ④ If this is the first time you are tuning the transmitter, set **DRIVER** control, **P.A. LOAD** control, and **P.A. PLATE** control to the straight up (12 o'clock) position. After gaining experience in tuning these controls, they may be pre-set to previously determined positions.

NOTE

UP TO NOW THE TRANSMITTER HAS BEEN "IDLING" AND THERE HAS BEEN NO PARTICULAR TIME LIMIT INVOLVED. THE FOLLOWING STEPS APPLY GRID DRIVE, AND REQUIRE CAUTION. OBSERVE THE RECOMMENDED 30 SECOND TIME LIMIT.

- ⑤ Set **METER SWITCH** to the **S-METER** position. Rotate **FUNCTION SWITCH** to the **TUNE-CW** position and:
 - a. Rotate **DRIVER** control for maximum meter reading.

- b. IMMEDIATELY rotate P.A. TUNE control for maximum meter reading. This is the critical "resonating" adjustment which must be done quickly to preserve P.A. tube life.

Rotate P.A. LOAD control for maximum.

- d. Re-adjust P.A. TUNE control for maximum. This adjustment should be repeated each time the P.A. load control is adjusted.

NOTE

With the Meter switch in the S-Meter position, and the Function Switch in the TUNE-CW position, the meter is reading *RELATIVE OUTPUT*. This *RELATIVE OUTPUT* reading has no relationship with the true output of the transmitter. To obtain a true indication of the transmitter output, place the Meter switch in P.A. CATHODE, and rotate the Function Switch to TUNE-CW. Normally, when the transmitter is in resonance, the meter reading should be approximately 300 ma. or higher. With high line voltage and new tubes it may read as high as 350 ma. Note that the 1011B operates at reduced power in the TUNE-CW position. The P.A. cathode bias resistor, R-406, is in the circuit during TUNE and CW operation. In voice mode, the bias resistor is shorted out, and the 1011B operates at full P.E.P. input rating.

- ⑥ The preceding steps complete the Transmitter Tuning procedure for SSB. Return the Function Switch to the REC. position.

VOICE TRANSMISSION (SSB)

After tuning up as outlined above, switch the Function Switch to the REC. position. Place the Meter Switch in the P.A. Cathode position. Press the microphone press-to-talk switch, and while speaking into the microphone, slowly rotate the MIC. GAIN control until occasional peak readings of 100 to 125 ma. are obtained. With most microphones, the MIC. GAIN control will be set between 9 and 12 o'clock, but it may vary considerably. The ALC circuit will help limit cathode current, but turning the MIC. GAIN up too high will still produce flat-topping and spurious signals, so it is important to hold it down. The meter is quite heavily damped, and its reading with average voice modulation may not look very impressive, but the voice peaks are going well over the 260 watt input power rating of your Siltronix transceiver.

NOTE

The Transceiver will not modulate with the Function Switch in the CAL. position.

AM TRANSMITTER TUNING

- ① Tune the transmitter to full output as you would for SSB transmitter tuning.
- ② Rotate MIC. GAIN control to full CCW (minimum) position.
- ③ Place the SIDEBAND SELECTOR switch in the AM REC. position.
- ④ Place the Meter Switch in the P.A. CATHODE position.
- ⑤ With the microphone press-to-talk switch pressed, rotate the CARRIER INSERTION control until cathode current is approximately 125 ma.
- ⑥ While talking in a normal tone of voice into the microphone, increase the MIC. GAIN control setting until the meter barely kicks upward. This setting will result in excellent AM transmissions.

CW TRANSMITTER TUNING/OPERATION

- ① Tune the transmitter to full output as you would for SSB transmitter tuning.
- ② Insert a CW key in the Key Jack on the rear panel of the transceiver.
- ③ In CW operation, it is necessary to switch the Function Switch to the TUNE-CW position when transmitting, and back to the REC. position while receiving.
- ④ While receiving, the carrier oscillator frequency is located 300 cycles outside the passband of the crystal lattice filter, thus providing a single heterodyne note, or "single signal" for CW reception. When transmitting in CW mode, the carrier frequency is moved approximately 800 cycles higher, placing it well inside the passband. This frequency shift is termed "Off-set CW transmit frequency", and avoids the problems encountered when the receive and transmit frequency are exactly the same. This is desirable for voice communication, of course, but when using the CW Keying mode the receiver must be tuned off frequency several hundred cycles in order to hear an audio beat. By providing this shift automatically CW operation is greatly simplified.

GENERAL DISCUSSION

The Siltronix 1011B transceiver provides single sideband, suppressed carrier transceive operation, and generates the single sideband signal by means of a crystal lattice filter. To permit a logical discussion of this mode of operation, certain definitions are necessary.

In a normal AM signal (double sideband with carrier), a radio frequency signal is modulated with an audio frequency signal. This is considered by many to be merely a case of varying the amplitude of the carrier at an audio rate. In fact, however, there are actually sideband frequencies generated, which are the results of mixing the RF and the A.F. signals. These sidebands are the sum of, and the difference between, the two heterodyned signals. In the detection of this conventional AM signal, the two sidebands are mixed with the carrier to recover and reproduce the audio intelligence. This is an inefficient means of transmission, because only 25 percent of the transmitted power is used to transmit intelligence. There are other attendant drawbacks also. The bandwidth of AM voice transmission is approximately 6 KHz, while the actual demodulated audio is only approximately 3 KHz. The result is inefficient use of the frequency band, and over half of the allotted band is unusable due to heterodynes, interference, and congestion.

In the single sideband, suppressed carrier mode of transmission, only one of the sideband signals is transmitted. The other sideband and the carrier are suppressed to negligible level. In addition to increasing the transmission efficiency by a factor of four, single sideband effectively doubles the number of stations or channels which can be used in a given band of frequencies.

It should be remembered that in the single sideband, suppressed carrier mode of transmitting, the unwanted sideband and carrier are only suppressed, not entirely eliminated. Thus, with a transmitted signal from a transmitter with 50 db sideband suppression, the other or unwanted sideband will be present, and will be transmitted, but its level will be 50 db below the wanted sideband. When this signal is received at a level of 20 db over S9, the unwanted sideband will be present at a level of approximately S5. The same is true of carrier suppression. With carrier suppression of 60 db, and a signal level of 20 db over S9, carrier will be present at a level of approximately S3 to S4.

For the following discussion refer to the schematic diagram, and to Figures 3, 4, and 5.

SIGNAL GENERATION

When the push-to-talk switch on the microphone is pressed, the transmitter portion of the transceiver is activated, and it generates a single sideband, suppressed carrier signal in the

following manner. Carrier is generated by Q3 Carrier Oscillator, which is a Pierce oscillator with the crystal operating in parallel resonance. This stage operates in both the transmit and receive modes. When transmitting, the RF output of the oscillator is injected into the control grid of the Balanced Modulator, V13. This balanced modulator is a beam deflection tube, and operates similar to a cathode ray tube in that the electron beam from the cathode is deflected to one output plate or the other by the charge appearing on the deflection plates. The carrier signal fed to the control grid of the balanced modulator appears on both plates of the output. The two plates are connected to Transformer T1301. The deflection plate DC voltages are adjusted by means of the carrier balance control, R1305, so that the RF being fed to the output plates will cancel out, and the output from T1301 will be zero. Audio signals from the Microphone Amplifier, V14, are applied as a modulating voltage to one deflection plate, and the two sidebands resulting from the sum and difference frequencies of the audio and carrier signals appear in the output of transformer T1301. Carrier suppression is approximately 60 db down. The Carrier Insertion control limits the amount of carrier that can be inserted in AM and thus protects the final amplifier from being over driven.

The double sideband, suppressed carrier signal is then coupled from the secondary winding of T1301 to the crystal filter, which suppresses the lower sideband, and permits only the upper sideband to be fed to the First IF Amplifier V7. The carrier frequency is generated at approximately 5500.0 KHz, normal sideband. With the opposite sideband crystal, the carrier crystal frequency will be 5504.6 KHz, and this positions the double sideband signal on the other side of the filter response curve, attenuating the upper sideband by at least 50 db.

Q1, the VFO 2N706 Oscillator, operates in the common base configuration as a Colpitts oscillator. Q2, the buffer, is used for isolation. The extremely good regulation achieved through using the Zener diode regulator D1712 across the bias supply voltage, also contributes to the stability.

The VFO in the Model 1011B exhibits extremely good stability after the initial warm-up period. Drift from a cold start will be less than 2 KHz during the first hour. After the initial warm-up period, drift will be negligible.

The single sideband, suppressed carrier signal from the First I.F. Amplifier is fed to the Transmit Mixer, V2, where it is heterodyned with the VFO signal. The resultant signal at the desired transmit frequency is amplified by the Driver, V3; and the Power Amplifier, V4. The signal from the VFO Amplifier is initiated in the transistorized VFO/Buffer circuit Q1 and Q2. The signal from the VFO is routed to the VFO Amplifier, and is mixed with the single sideband from the IF amplifier, resulting in output in the 10 meter band. When the transceiver is in the TRANSMIT mode, the gain

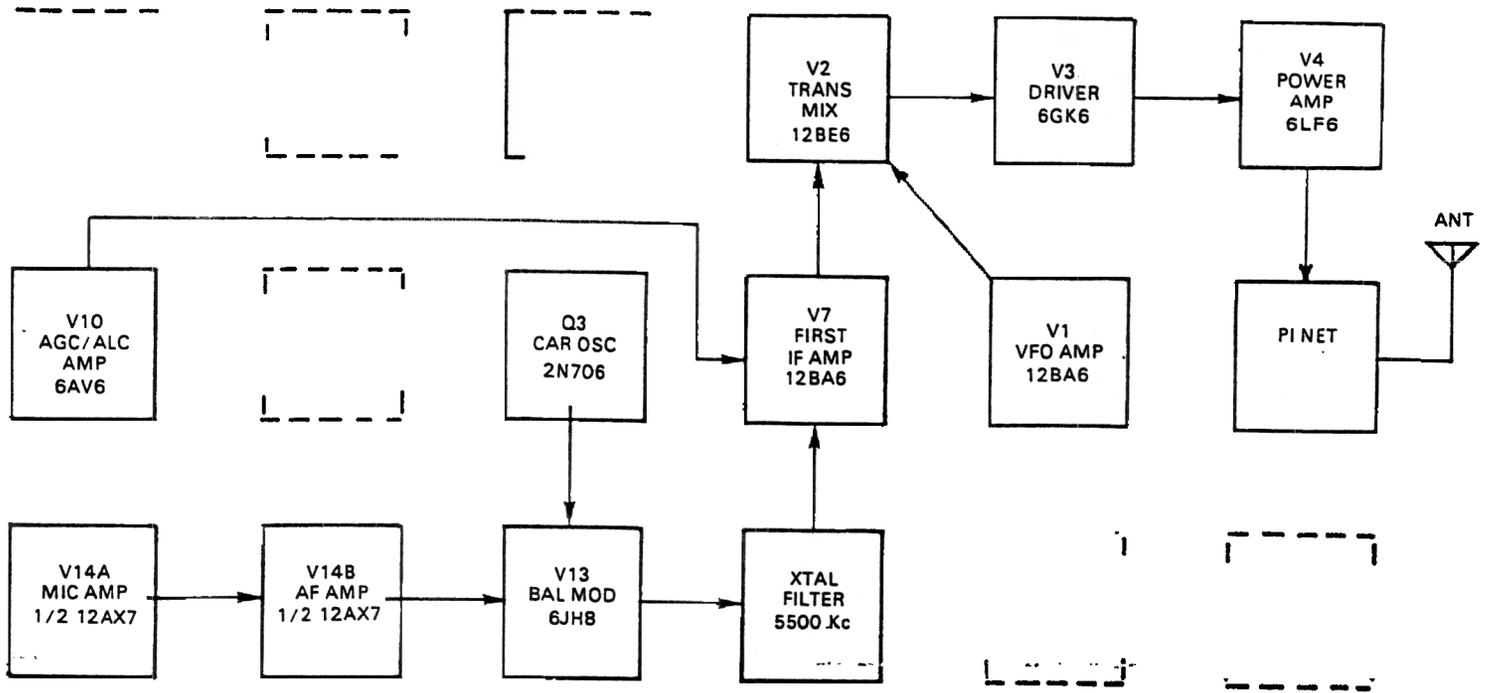


FIGURE 3. BLOCK DIAGRAM, TRANSMIT MODE

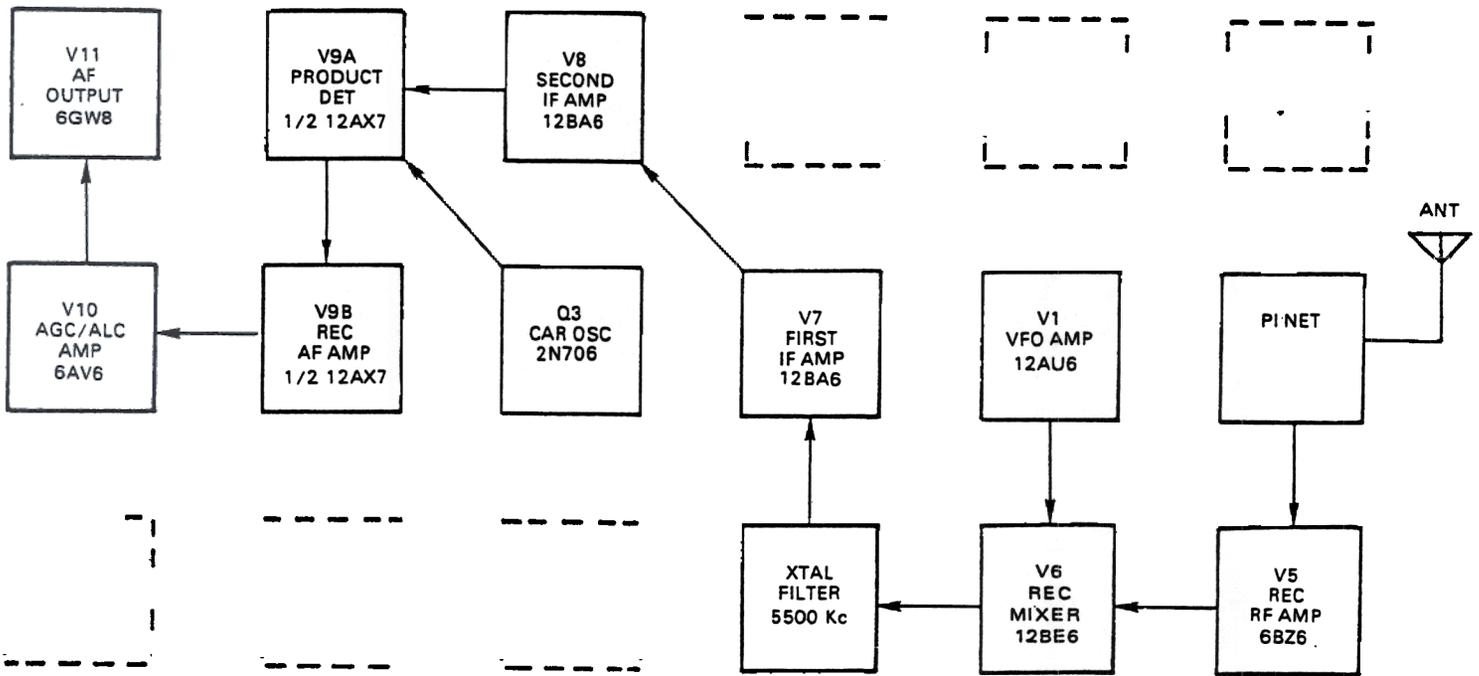


FIGURE 4. BLOCK DIAGRAM, RECEIVE MODE

of the First IF Amplifier is controlled through the Automatic Level Control (ALC) network (using the AGC Amplifier V10) to control the gain of the stage in response to the average input power to the Power Amplifier. This ALC system will compensate for any extremely strong input signals, but does not completely eliminate the necessity of proper adjustment of the Mic. Gain Control. This feature will help prevent the transmitter from flat topping and spurious emissions, but considerable distortion may occur if the Mic. Gain Control is not properly adjusted. Refer to Operating Instructions.

TUNE AND CW OPERATION

Normally, the frequency of the carrier oscillator is approximately 300 Hertz outside the 6 db passband of the crystal lattice filter. In TUNE position, the frequency of the carrier oscillator is moved approximately 800 Hertz to place it well within the passband of the crystal lattice filter. A similar procedure is followed for CW to allow full carrier output during CW operation.

RECEIVE

In RECEIVE position, or at any time when the transmitter is not in TRANSMIT, all circuits used in transmitting are disabled through the relay controlled circuits, K1. The relay is energized for transmitting and de-energized for receiving. One contact, when de-energized, allows signals from the transmitting tank circuit and antenna to be fed to the Receiver R.F. Amplifier, V5; where they are amplified and then fed to the control grid of the Receiver Mixer, V6. The local oscillator signal from the VFO Amplifier is now used to heterodyne the received signal to the IF frequency. All I.F. amplification is accomplished at this frequency, nominally 5500.0 KHz, through IF amplifiers V7 and V8. In the Product Detector, V9A, the IF signal is heterodyned with the carrier frequency generated by Carrier Oscillator, Q3. The resultant audio is then amplified by V9B, which then couples to the AGC amplifier, V10, and the audio output stage, V11.

FREQUENCY CALIBRATION

Frequency calibration of the Model 1011B is in 5 KHz increments. Dial accuracy and tracking are quite good, but caution must always be observed when operating near band edges. Measuring the frequency with the 100 KHz calibrator when working near band edges is recommended.

DIAL SET

A DIAL SET control has been provided so that dial adjustment can be made at any 100 KHz point on the dial. With calibrator on, set the dial to any 100 KHz point closest to the frequency you wish to work. Now adjust DIAL SET control to zero-beat the VFO with the 100 KHz Calibrator. This provides greater accuracy of dial readout.

CAUTION

CARE MUST BE EXERCISED WHEN TUNING FOR THE 100 KHz HARMONICS OF THE CALIBRATOR. SEVERAL SIGNALS MAY BE HEARD, ALTHOUGH THEY WILL BE DEFINITELY WEAKER THAN THE CORRECT HARMONICS.

TRANSMIT AND RECEIVE SWITCHING

Transmit and receive switching is performed by relay K1. In TRANSMIT, only those tubes that operate in the transmit mode are operative, all others being biased to cutoff through the relay contacts. In RECEIVE, with the relays de-energized, the tubes that are used only in transmit are cut off in the same manner. Relay K1 when de-energized, feeds signals from the output Pi-network to the receiver. Note that relay K1 will not operate when the BAND SWITCH control is in "CB" position.

POWER RATING

The Siltronix 1011B is capable of 180 watts, P.E.P. input under steady state two-tone test conditions. The peak envelope power, when voice modulated, is considerably greater, typically 260 watts, or more.

The built-in power supply produces a no-load plate voltage of approximately 880 volts. Under TUNE conditions, or CW operation, this voltage will drop to approximately 680 volts. Under steady state two-tone modulation, the voltage will drop to approximately 710 volts. If the power amplifier idling current is 40 ma., and the two-tone current, just before flat-topping, is 200 ma., the peak two-tone current will be 300 ma. Under these conditions, the P.E.P. input will be 710 volts times 300 ma. = 213 watts. Under voice modulation, because average power is considerably less, the power amplifier plate and screen voltages will be maintained higher, even during voice peaks, by the power supply filter capacitors. Peak plate current will therefore also be higher than with two-tone test conditions. Under typical operating conditions, peak plate current before flat-topping will be 350 ma. at 800 volts, to result in an input of 280 watts P.E.P. Readings of cathode current will not reflect this power input, however, because of the damping in the cathode current meter. Cathode current readings under normal voice input should not average more than 100 to 120 ma.

POWER AMPLIFIER PLATE DISSIPATION

There is often a misunderstanding about the plate dissipation of tubes operated as AB1 amplifiers under voice modulation. In the Siltronix 1011B, while in the transmit mode, and with no modulation, the plate voltage will be approximately 830 volts, the plate current 40 ma., and the power input 33 watts.

Authorities agree that the average voice power is 20 to 20 db below peak voice power. Normally, some peak clipping in the power amplifier can be tolerated, and a peak-to-average ratio of only 6 db may sometimes occur. Under such conditions, the average power input will be 80 watts, and average plate current will be 100 ma. With power amplifier efficiency of 65 percent, plate dissipation will be approximately

26 watts. The 6LF6 is rated at 40 watts, continuous duty cycle, in normal TV service. Thus it can be seen that under normal operating conditions, the Power Amplifier tube in the 1011B is not being driven very hard. Note, however, that proper modulation level must be maintained by correct setting of Mic. Gain, and that the length of time in TUNE position must be limited to not more than 30 seconds at a time.

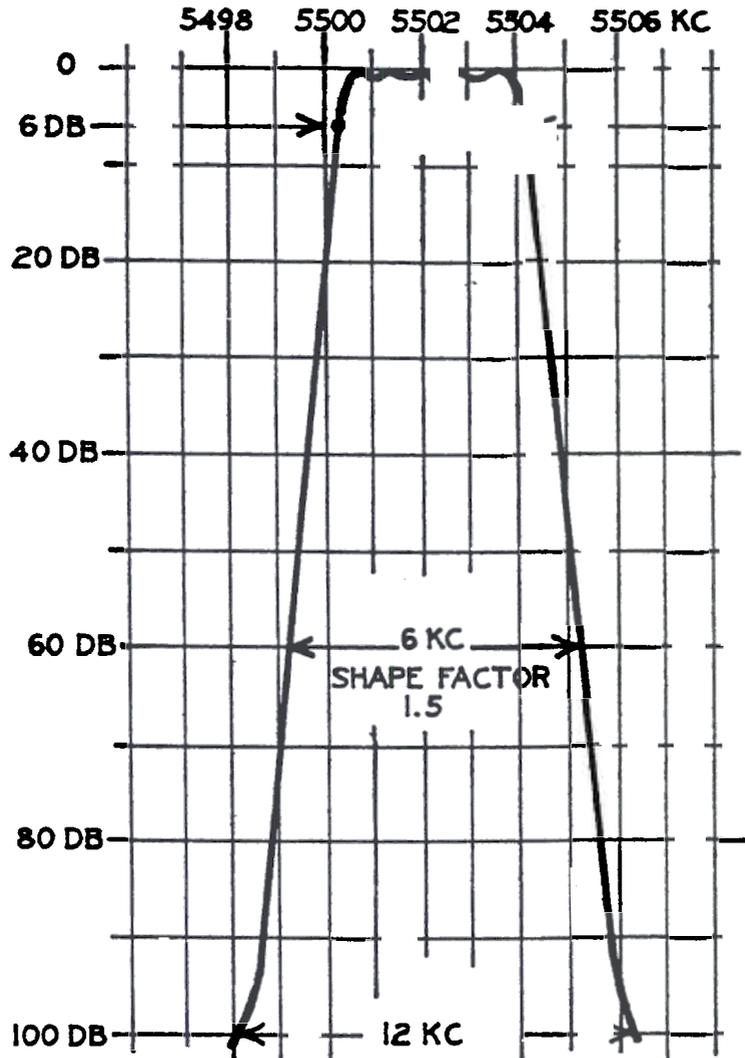


FIGURE 5. CRYSTAL FILTER CHARACTERISTICS

ALIGNMENT AND TROUBLESHOOTING

The alignment procedures presented in this section are routine touch-up procedures for all tuned circuits and other adjustments. It is recommended that the procedures be performed in the order presented. However, if complete realignment is not required (as may be the case when just one tube is replaced), perform just those procedures required. Refer to Figures 6 and 7 for component placement.

RECEIVER ALIGNMENT

Receiver alignment involves only the adjustment of the Second I.F. coil. The R.F. coils which affect receiver performance are also used in the TRANSMIT mode. Their adjustment is covered under "TRANSMITTER ALIGNMENT".

- ① After allowing approximately five minutes for warm-up, tune the receiver to the middle of the band and on a "clear" frequency.
- ② Adjust the P.A. TUNE, P.A. LOAD, AND DRIVER controls for maximum noise.
- ③ Adjust the Second I.F. coil (L801) for maximum background noise.

S-METER ADJUSTMENT

With the antenna disconnected, R.F. GAIN control fully clockwise, and METER switch in S-METER position, set R705, located on the rear panel, for zero meter reading. Make sure no local signals are being received.

TRANSMITTER ALIGNMENT

To adjust the Power Amplifier Bias:

Switch METER switch to P.A. CATHODE position.

Rotate CARRIER INSERTION control fully counter clockwise.

After allowing approximately five minutes for warm-up, key the transmitter with the microphone switch. Without speaking into the microphone, adjust the Carrier Balance control on the bottom cover for a Null.

Again key the transmitter with the microphone switch, and without speaking into the microphone, adjust the P.A. BIAS control on the rear panel until the meter reads 40 ma. of *idling current*. This point is indicated on the meter by the "delta" symbol.

2. The alignment of transmitter circuits involves the adjustment of tuned circuits in the VFO Amplifier, V1; the Transmit MIXER, V2; and the DRIVER stage, V3. It is recommended that a 50 ohm dummy load be connected to the antenna jack during this series of adjustments.

- Ⓐ Set the tuning dial to approximately 28.3 MHz, and the DRIVER control at 12 o'clock.
- Ⓑ Set P.A. LOAD control to 9 o'clock.
- Ⓒ Set METER switch to P.A. CATHODE.
- Ⓓ Press Mic. button. Check *idling current*. It should be on the "delta" symbol when the CARRIER BALANCE control is nulled, and the CARRIER INSERTION control is fully counter clockwise. Adjust P.A. BIAS control if necessary.
- Ⓔ With Mic. button pressed, adjust CARRIER BALANCE control for slight increase in meter reading, 50 to 60 ma. Adjust P.A. TUNE control to resonance (dip).
- Ⓕ Adjust coils L101, L201, and L301, for maximum reading. When reading goes higher than 80 ma., or so, adjust CARRIER BALANCE control for 60 ma. again.
- Ⓖ Adjust coils carefully for maximum peak. Exercise caution with CARRIER BALANCE control. Do not exceed 100 ma. reading for more than a few seconds. Be sure P.A. TUNE control is resonated (adjusted for "dip" in meter reading).

3. Power Amplifier Neutralization.

- Ⓐ After allowing approximately five minutes for warm-up, tune transmitter to approximately 28.3 MHz.
- Ⓑ Set the P.A. LOAD control to 9 o'clock.
- Ⓒ Set METER switch to P.A. CATHODE.
- Ⓓ Key the transmitter with the Mic. button, and without speaking into the microphone, adjust the CARRIER BALANCE control for a reading of approximately 100 ma. Quickly adjust the DRIVER control for a peak. Quickly re-adjust the CARRIER BALANCE control to 100 ma. if it increased to a higher reading.
- Ⓔ With the Mic. button still pressed, rotate the P.A. TUNE control through its range from 9 o'clock to 3 o'clock. You will note a pronounced "dip" in meter reading at resonance. Observe any tendency


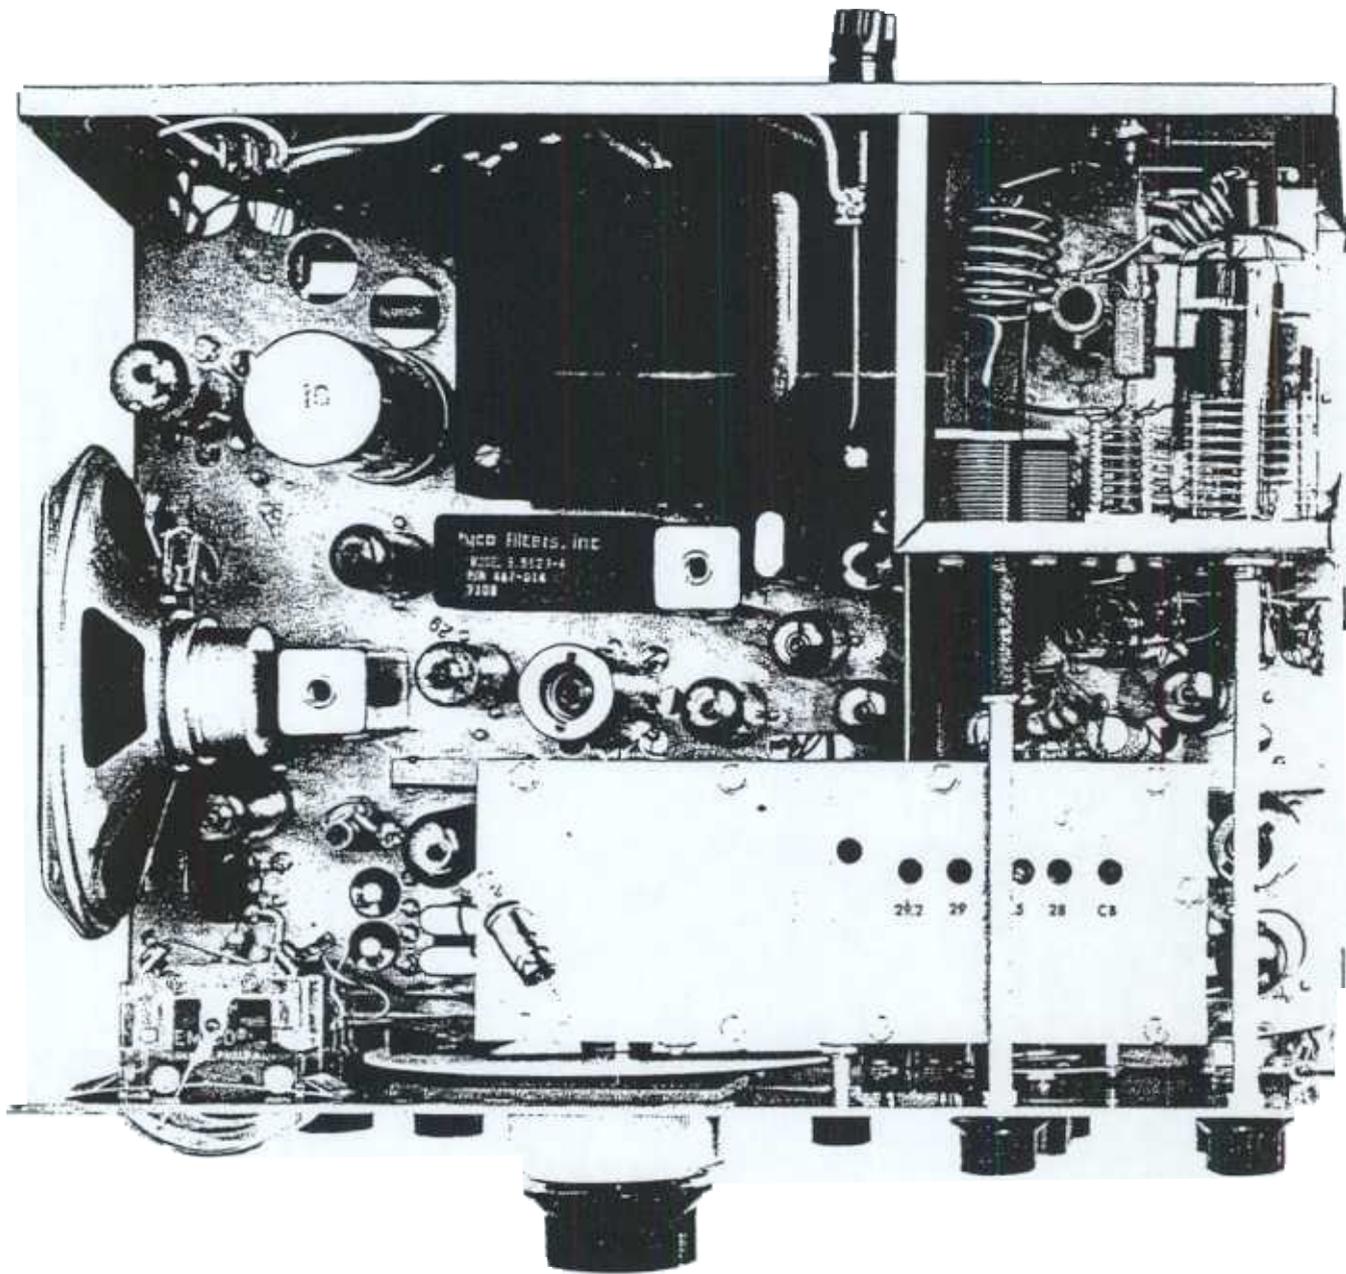


FIGURE 6. SILTRONIX MODEL 1011B TOP VIEW.

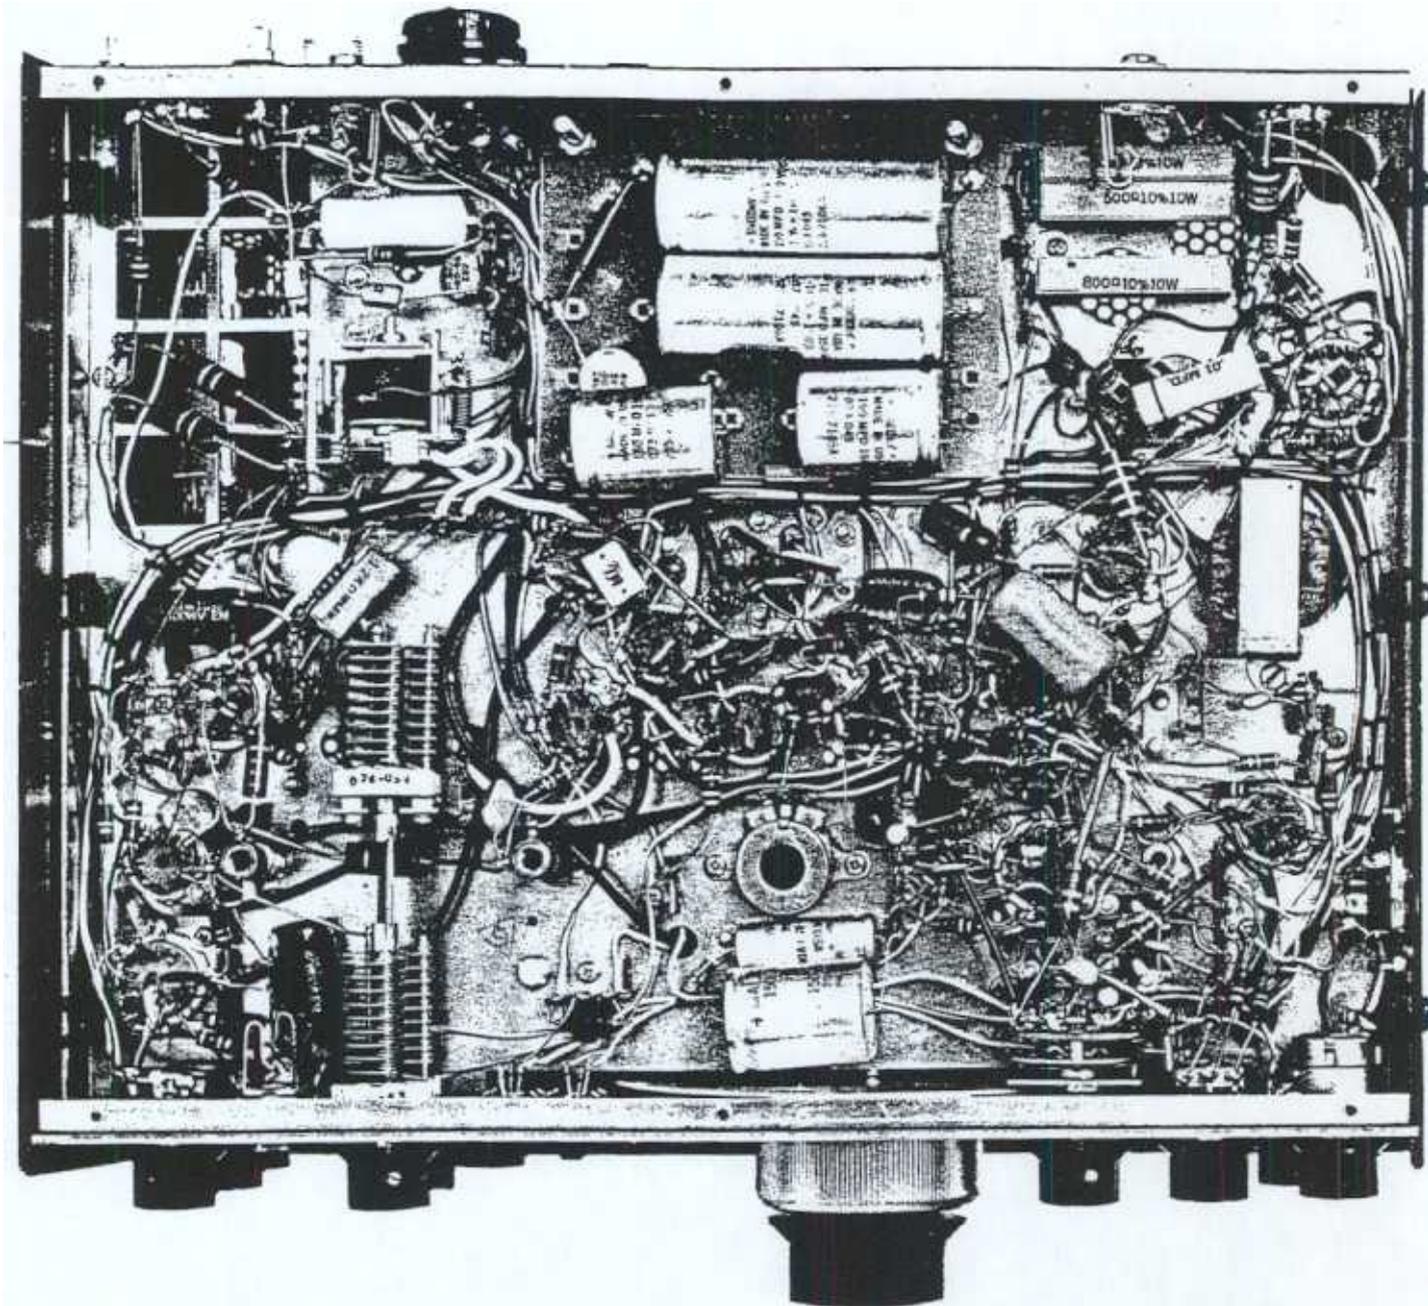

RD MODE BOTTOM W.

for the meter to "peak" above the 100 ma. plateau on either side of resonance. If there is such a peak, adjust C401, the P.A. NEUTRALIZING trimmer to suppress the peak. When properly neutralized, the meter reading will hold steadily at 100 ma. except for the sharp dip at resonance, but there will be no peak above the 100 ma. level.

- Ⓕ Key the transmitter with the Mic. button, and re-adjust the CARRIER BALANCE control for minimum Power Amplifier current. Power Amplifier idling current should be on the "delta" symbol. If not, repeat the Power Amplifier Bias adjustment described in TRANSMITTER ALIGNMENT, STEP 1.

4. Carrier Frequency Adjustment.

A dummy load wattmeter and audio generator are required for this adjustment.

- Ⓐ After allowing a five minute warm-up period, tune the transmitter to approximately 28.3 MHz.
- Ⓑ Key the transmitter with the Mic. button, and adjust the CARRIER BALANCE control for minimum power amplifier current.
- Ⓒ Insert 1500 Hertz of audio from an audio generator into the Mic. Jack on the front panel. Adjust the gain of the audio generator and the Mic GAIN control (R1404) until the wattmeter reads approximately 10 to 15 watts.
- Ⓓ Adjust the First I.F. coil, L701, for maximum output. Adjust both slugs of the balanced modulator transformer, T1301, for maximum output.

- Ⓔ Increase gain of audio generator until the wattmeter reads 40 watts. Sweep generator down to 200 Hertz and adjust the USB carrier oscillator trimmer, C1503, for a reading of 10 watts.
- Ⓕ Switch to the LSB position. Adjust the LSB carrier oscillator trimmer, C1501, for a reading of 10 watts.
- Ⓖ Re-check with audio generator set at 1500 Hertz and 40 watts. Sweep down to 200 Hertz and re-adjust carrier oscillator trimmers, if required, for 10 watts.

5. VFO Calibration.

After allowing approximately five minutes for warm-up, tune the dial to the 200 KHz increment for any of the 10 meter ranges to be calibrated. For CB calibration, tune the dial to the 27,100 KHz increment. Using the 100 KHz crystal calibrator as a signal source, tune the signal for zero beat and note the corresponding dial reading. If the signal does not zero beat on the desired dial increment, locate the VFO cover and carefully adjust the correct trimmer until it does.

Use an insulated alignment tool for adjustment. Accuracy in other parts of the bands will be quite good, but remember that the 1011B is not to be considered a frequency standard; Be cautious when operating near band edges.

6. Troubleshooting.

The information contained in Figures 6 and 7, together with the voltage and resistance measurements in Table 1, and the information in Table 2, should be sufficient for most troubleshooting by the average licensed amateur radio operator.

TABLE 1. VOLTAGE AND RESISTANCE MEASUREMENTS

Voltage measurements were taken using a HEWLETT PACKARD Model 410C/B VTVM. Resistance measurements were taken using a SIMPSON Model 260 Volt-Ohm meter.

TUBE TYPE	R = Rec. T = Trans.	Socket Pin Numbers								
		1	2	3	4	5	6	7	8	9
V1 12BA6 VFO Amp.	R Volts	-0.6	0	0	12.6AC	45	45	0		
	T Volts	-0.6	0	0	12.6AC	50	50	0		
	Ohms	1.2K	0	0	0.2	0	*	0		
V2 12BE6 Trans. Mixer	R Volts	-1.2	0	0	12.6AC	250	-2	0		
	T Volts	-1.0	0	0	12.6AC	250	135	0		
	Ohms	100K	0	0	.02	*	11K	35K		
V3 6GK6 Driver	R Volts	0	-6.7	0	0	6.3AC	NC	255	0	0
	T Volts	0	-6.7	0	0	6.3AC	NC	265	225	0
	Ohms	10	100K	0	0	0.3	NC	*	0.2	0
V5 6BZ6 Rec. R.F.	R Volts	0	0	6.3AC	0	255	115	0		
	T Volts	0	0	6.3AC	0	255	0	0		
	Ohms	1.1M	0	0.1	0	14K	40K	0		
V6 12BE6 Rec. Mixer	R Volts	-3.7	0	12.6AC	12.6AC	220	110	0		
	T Volts	-3.4	0	12.6AC	12.6AC	220	0	0		
	Ohms	200K	0	0	0	20K	20K	70K		
V7 12BA6 1st I.F.	R Volts	-1.8	0	0	12.6AC	210	48	0		
	T Volts	-1.8	0	0	12.6AC	220	50	0		
	Ohms	500	0	0	0.1	15K	50K	0		
V8 12BA6 2nd I.F.	R Volts	-1.7	0	0	12.6AC	205	105	0		
	T Volts	-1.7	0	0	12.6AC	225	0	0		
	Ohms	110K	0	0	0.1	15K	40K	0		
V9 12AX7 Det. A.F.	R Volts	55	-1	0	0	0	145	-0.25	0	6.3AC
	T Volts	-3	-1.6	0	0	0	0	-0.25	0	6.3AC
	Ohms	400K	11K	300	0	0	125K	1M	0	0.2
V10 6AU6 AGC Amp.	R Volts	0	2.0	6.3AC	0	0	0	225		
	T Volts	0	1.6	6.3AC	0	0	0	175		
	Ohms	500K	5K	0.2	0	0	700K	100K		
V11 A.F. Output	R Volts	0	1.9	215	6.3AC	6.3AC	250	9	0	170
	T Volts	.7	0	0	6.3AC	6.3AC	250	0	0	0
	Ohms	22	10K	10K	0	0	8K	2.5K	1.1M	120K
V12 12BA6 100KC Cal.	R Volts	0	0	12.6AC	225	225	75			
	T Volts	0	0	12.6AC	175	175	55			
	Ohms	1M	0	0.1	100K	200K	0			
V13 6JH8 Bal. Mod.	R Volts	0	0	0	6.3AC	0	-1.4	0	0	0
	T Volts	45	45	75	6.3AC	0	-1.4	0	100	100
	Ohms	2K	.75K	500K	0.2	0	35K	0	75K	75K
V14 12AX7 Mic. Amp	R Volts	50	0	0	0	0	0	0	0	6.3AC
	T Volts	45	0	0	0	0	75	0	0	6.3AC
	Ohms	1M	0	0	0	0	600K	0	10K	0.2
		1	2	3	4	5	6,7,8,9	10	11	12
V4 6LF6 Pwr. Amp.	R Volts	12.6AC	0	NC	0	-75	NC	0	0	12.6AC
	T Volts	12.6AC	0	NC	0	-75	NC	0	180	12.6AC
	Ohms	0	2.4	NC	0	180K	NC	0	100	0

TABLE 2. TROUBLESHOOTING GUIDE

DEFECT	POSSIBLE CAUSE
PA Idling Current Unstable	<ol style="list-style-type: none"> 1. Defective Power Amplifier Tube (V4). 2. Defective BIAS control and/or associated components. 3. Defective bias power supply.
Inability to Load per Operation Instructions	<ol style="list-style-type: none"> 1. Antenna not resonant at operating frequency. 2. Defective transmission line. 3. Defective antenna loading coil(s). 4. Tubes V1 through V4 defective.
Insufficient Sideband Suppression	<ol style="list-style-type: none"> 1. Carrier Oscillator (Q3) operating on incorrect frequency. 2. Crystal filter defective or mistuned.
Insufficient Carrier Suppression	<ol style="list-style-type: none"> 1. Tube V13 defective. 2. Transformer T1301 defective or mistuned. 3. Carrier Oscillator (Q3) operating on incorrect frequency.
Microphonics in Transmitter	<ol style="list-style-type: none"> 1. Tubes V13 and/or V14 defective. 2. IF coil L701 Defective or incorrectly adjusted. 3. Microphone defective.
Low Receiver Sensitivity	<ol style="list-style-type: none"> 1. Tubes V5 through V10 defective. 2. Incorrect adjustment of the transmitter Pi-Network. 3. IF coil L801 incorrectly adjusted or defective. 4. K1 relay contacts defective.

TABLE 3. VFO AND CARRIER OSCILLATOR FREQUENCIES

Tuning Dial	V1 Injection Frequency	Q1 Osc. Frequency	Q3 Osc. Carrier Frequency
26,950 KC	21,450 KC	(1/2) 10,725 KC	5500 KC
27,260 KC	21,760 KC	(1/2) 10,880 KC	5500 KC
28,000 KC	22,500 KC	(1/2) 11,250 KC	5500 KC
29,700 KC	24,200 KC	(1/2) 12,100 KC	5500 KC

PARTS LIST

RESISTORS

All resistors are ½ watt 10% tolerance, unless otherwise noted.

R101 82 Ohm
 R102 47K
 R103 10K-2W
 R104 56 Ohm
 R201 27K
 R202 100K
 R203 100K
 R204 10K-2W
 R205 470K
 R206 2.7K
 R301 100K
 R302 100K
 R303 10 Ohm
 R304 100 Ohm
 R401 100 Ohm
 R402 25K Bias Pot.
 R403 4.7K
 R404 1K
 R405 3 Ohm-5W
 R406 100 Ohm-5W
 R407 2.7K
 R408 15K
 R501 100K
 R502 220K
 R503 470 Ohm
 R504 10K
 R505 25K R.F. Gain Pot
 R506 10K
 R507 470K
 R601 47K
 R701 1.5K
 R702 33K-2W
 R703 1K
 R704 47K
 R705 25K S-Meter Zero Pot
 R706 15K
 R707 47K-2W
 R708 100K
 R801 100K
 R802 1K
 R803 4.7K
 R901 100K
 R902 270 Ohm
 R903 270K
 R904 47K
 R905 10 Meg
 R906 1 Meg
 R907 47K
 R908 100K
 R1001 1 Meg
 R1002 270K
 R1003 470K
 R1004 4.7K
 R1005 15K

R1006 2.2 Meg
 R1007 270K
 R1008 2.2 Meg
 R1009 100K
 R1101 1 Meg A.F. Gain Pot
 R1102 10K
 R1103 100K
 R1104 1 Meg
 R1105 270 Ohm
 R1201 1 Meg
 R1202 27K
 R1203 100K
 R1301 1K
 R1302 10K
 R1303 10K
 R1304 270K
 R1305 10K-1W
 R1306 27K
 R1307 27K
 R1308 5K Car. Bal. Pot
 R1309 1K
 R1310 100K
 R1311 27K
 R1312 Selected Value
 R1313 5K Carrier Insertion Pot
 R1401 150K
 R1402 47K
 R1403 1K
 R1404 1 Meg Mic. Gain Pot
 R1405 270K
 R1406 470K
 R1407 2.2 Meg
 R1408 47K
 R1501 10K
 R1502 68K-2W
 R1503 22K
 R1504 2.2K
 R1505 1.5K
 R1506 100 Ohm
 R1601 2.7K
 R1602 1.5K
 R1603 1K
 R1604 100K
 R1605 470 Ohm
 R1606 2.7K
 R1607 1K
 R1608 470 Ohm
 R1609 470 Ohm
 R1701 10K-2W
 R1702 4.7 Ohm
 R1703 150K-2W
 R1704 150K-2W
 R1705 800 Ohm-10W
 R1706 1.2K-5W
 R1707 270K
 R1708 2.7K
 R1709 800 Ohm-10W

R1710 500 Ohm-10W
 R1711 100K

TRANSISTORS

Q1 2N706 Oscillator
 Q2 2N5130 Buffer
 Q3 2N706 Car. Oscillator

DIODES

D401 1N34A
 D501 1N914
 D701 1N914
 D702 1N914
 D703 1N914
 D901 1N34A
 D1001 1N914
 D1002 1N34A
 D1003 1N34A
 D1201 1N34A
 D1601 1N914
 D1701 RCA 39804
 D1702 1A-600V
 D1703-1706 RCA 39804
 D1707-1710 RCA 39804
 D1711 RCA 39804
 D1712 1N4742 Zener

COILS

L101 VFO Amp
 L201 Trans. Mixer
 L301 Driver
 L302 82 uh
 L401 82 uh
 L402 55 uh
 L403 Pi-Network
 L404 30 uh
 L701 5500KC I.F.
 L801 5500KC I.F.
 L1501 200 uh
 L1601 VFO Coil
 L1602 200 uh
 L1603 200 uh
 L1701 200 uh
 L1702 17 uh

CAPACITORS

Unless otherwise specified, a capacitor is listed in pico farads with a whole number and in micro farads with a decimal number.


C101 .01 +80-20% 500V Disc
 C102 .002 20% 1KV Disc
 C103 27pf Disc
 C104 1pf 500V Ceramic
 C105 15pf Disc
 C106 5pf Disc
 C107 2pf Disc

C108	2pf Disc	C1301	.01 +80-20% 500V Disc	Z401	Parasitic Suppressor
C109	2pf Disc	C1302	.01 +80-20% 500V Disc	RELAYS	
C110	.01 +80-20% 500V Disc	C1303	.01 +80-20% 500V Disc	K1	3 PDT Relay, 12 VDC Coil
C111	.002 20% 1KV Disc	C1304	.01 +80-20% 500V Disc	CRYSTALS	
C201	.05 200V Mylar	C1305	.01 +80-20% 500V Disc	Y1201	100KC Crystal Calibrator
C202	.01 +80-20% 500V Disc	C1306	220pf Disc	Y1501	5500KC Carrier Oscillator
C203	470pf SM	C1307	.002 20% 1KV Disc	Y1502	5504.6KC Carrier Oscillator
C204	2pf 500V Ceramic	C1401	.01 +80-20% 500V Disc	TUBES	
C205	.002 20% 1KV Disc	C1402	.1 10% 400V Mylar	V1	12BA6 VFO Amp.
C2A	20pf Driver Tuning	C1403	.01 +80-20% 500V Disc	V2	12BE6 Trans. Mixer
C2B	20pf Driver Tuning	C1404	.01 +80-20% 500V Disc	V3	6GK6 Driver
C302	.002 20% 1KV Disc	C1405	.1 10% 400V Mylar	V4	6LF6 Power Amp.
C303	510pf SM	C1406	100pf Disc	V5	6BZ6 Rec. RF Amp.
C304	.002 20% 1KV Disc	C1407	.01 +80-20% 500V Disc	V6	12BE6 Rec. Mixer
C305	5pf	C1501	6-30pf Ceramic Trimmer	V7	12BA6 First I.F. Amp.
C401	20pf Neut. Trimmer	C1502	10pf Disc	V8	12BA6 Second I.F. Amp.
C402	15pf 3KV Disc	C1503	6-30pf Ceramic Trimmer	V9	12AX7 Prod. Det./Rec. Audio
C403	.01 +80-20% 500V Disc	C1504	270pf SM	V10	6AV6 AGC/ALC Amp.
C404	.002 20% 1KV Disc	C1505	270pf SM	V11	6GW8 A.F. Output
C405	.01 +80-20% 500V Disc	C1506	.01 +80-20% 500V Disc	V12	12BA6 100KC Cal.
C406	270pf 2500V Mica	C1507	30pf	V13	6JH8 Bal. Mod.
C407	40pf P.A. Tune	C1601	Selected	V14	12AX7 Trans A.F./Mic. Amp.
C408	410pf P.A. Load	C1602	5pf Trimmer	SWITCHES	
C409	.01 +80-20% 500V Disc	C1603	5pf Trimmer	S1A-B	Bandswitch
C410	.01 +80-20% 500V Disc	C1604	5pf Trimmer	S2	Power Off and On (Part of RF Gain)
C501	.01 +80-20% 500V Disc	C1605	Selected	S3	Cal. Rec. Tune/CW
C502	.01 +80-20% 500V Disc	C1606	5pf Trimmer	S4	P.A. Cath./S-Meter
C503	30pf Disc	C1607	5pf Trimmer	S5	ANL
C601	.01 +80-20% 500V Disc	C1608	10pf Main Tuning	S6	Sideband Selector
C602	220pf Disc	C1609	Selected	S7	Spot
C603	430pf SM	C1610	2pf Dial Set		
C701	1 MFD 50V	C1611	20pf Disc		
C702	50pf Disc	C1612	270pf SM		
C703	.01 +80-20% 500V Disc	C1613	6-30pf Ceramic Trimmer		
C704	.01 +80-20% 500V Disc	C1614	.01 +80-20% 500V Disc		
C705	2pf Disc	C1615	.01 +80-20% 500V Disc		
C706	.01 +80-20% 500V Disc	C1616	300pf SM		
C801	.01 +80-20% 500V Disc	C1617	27pf SM		
C802	.01 +80-20% 500V Disc	C1618	.01 +80-20% 500V Disc		
C803	.01 +80-20% 500V Disc	C1619	.01 +80-20% 500V Disc		
C804	50pf Disc	C1620	.002 20% 1KV Disc		
C805	50pf Disc	C1701	.01 +80-20% 500V Disc		
C901	220pf Disc	C1702	100 MFD 35V		
C902	.002 20% 1KV Disc	C1703	.01 +80-20% 500V Disc		
C903	150 pf Disc	C1705	.0047 1KV		
C904	2 MFD 450V	C1706	.0047 1KV		
C905	500pf Disc	C1707	150 MFD 150V		
C906	.002 20% 1KV Disc	C1708	100 MFD 350V		
C1001	.05 200V Mylar	C1709	100 MFD 350V		
C1002	.05 200V Mylar	C1710	.002 20% 1KV Disc		
C1003	.001 20% Disc	C1711	.01 +80-20% 500V Disc		
C1004	.01 +80-20% 500V Disc	C1712A	80 MFD 400V		
C1005	.001 20% Disc	C1712B	80 MFD 400V		
C1006	.001 20% Disc	C1712C	5 MFD 400V		
C1007	.001 20% Disc	C1712D	5 MFD 400V		
C1101	220pf Disc	C1713	150 MFD 150V		
C1102	.002 20% 1KV Disc	C1714	150 MFD 150V		
C1103	500pf Disc	TRANSFORMERS			
C1104	.01 10% 1000V Tubular	T1101	A.F. Output Trans.		
C1201	50pf Disc	T1301	5500KC Bal. Mod. Trans.		
C1202	60pf Trimmer	T1701	Power Trans.		
C1203	150pf Disc				



WARRANTY POLICY

Siltronix Corporation warrants this equipment against defects in material or workmanship, except for tubes, transistors, and diodes, under normal service for a period of 6 months from date of original purchase. Tubes, transistors, and diodes are covered under the warranty policy for a period of 90 days. This warranty is valid only if the enclosed card is properly filled in and mailed to the factory within ten days of date of purchase. Do not ship to the factory without prior authorization. This warranty is limited to repairing or replacing only the defective parts, and is not valid if the equipment has been tampered with, misused or damaged. All returns for repairs must be sent freight prepaid. Siltronix will prepay the return freight.

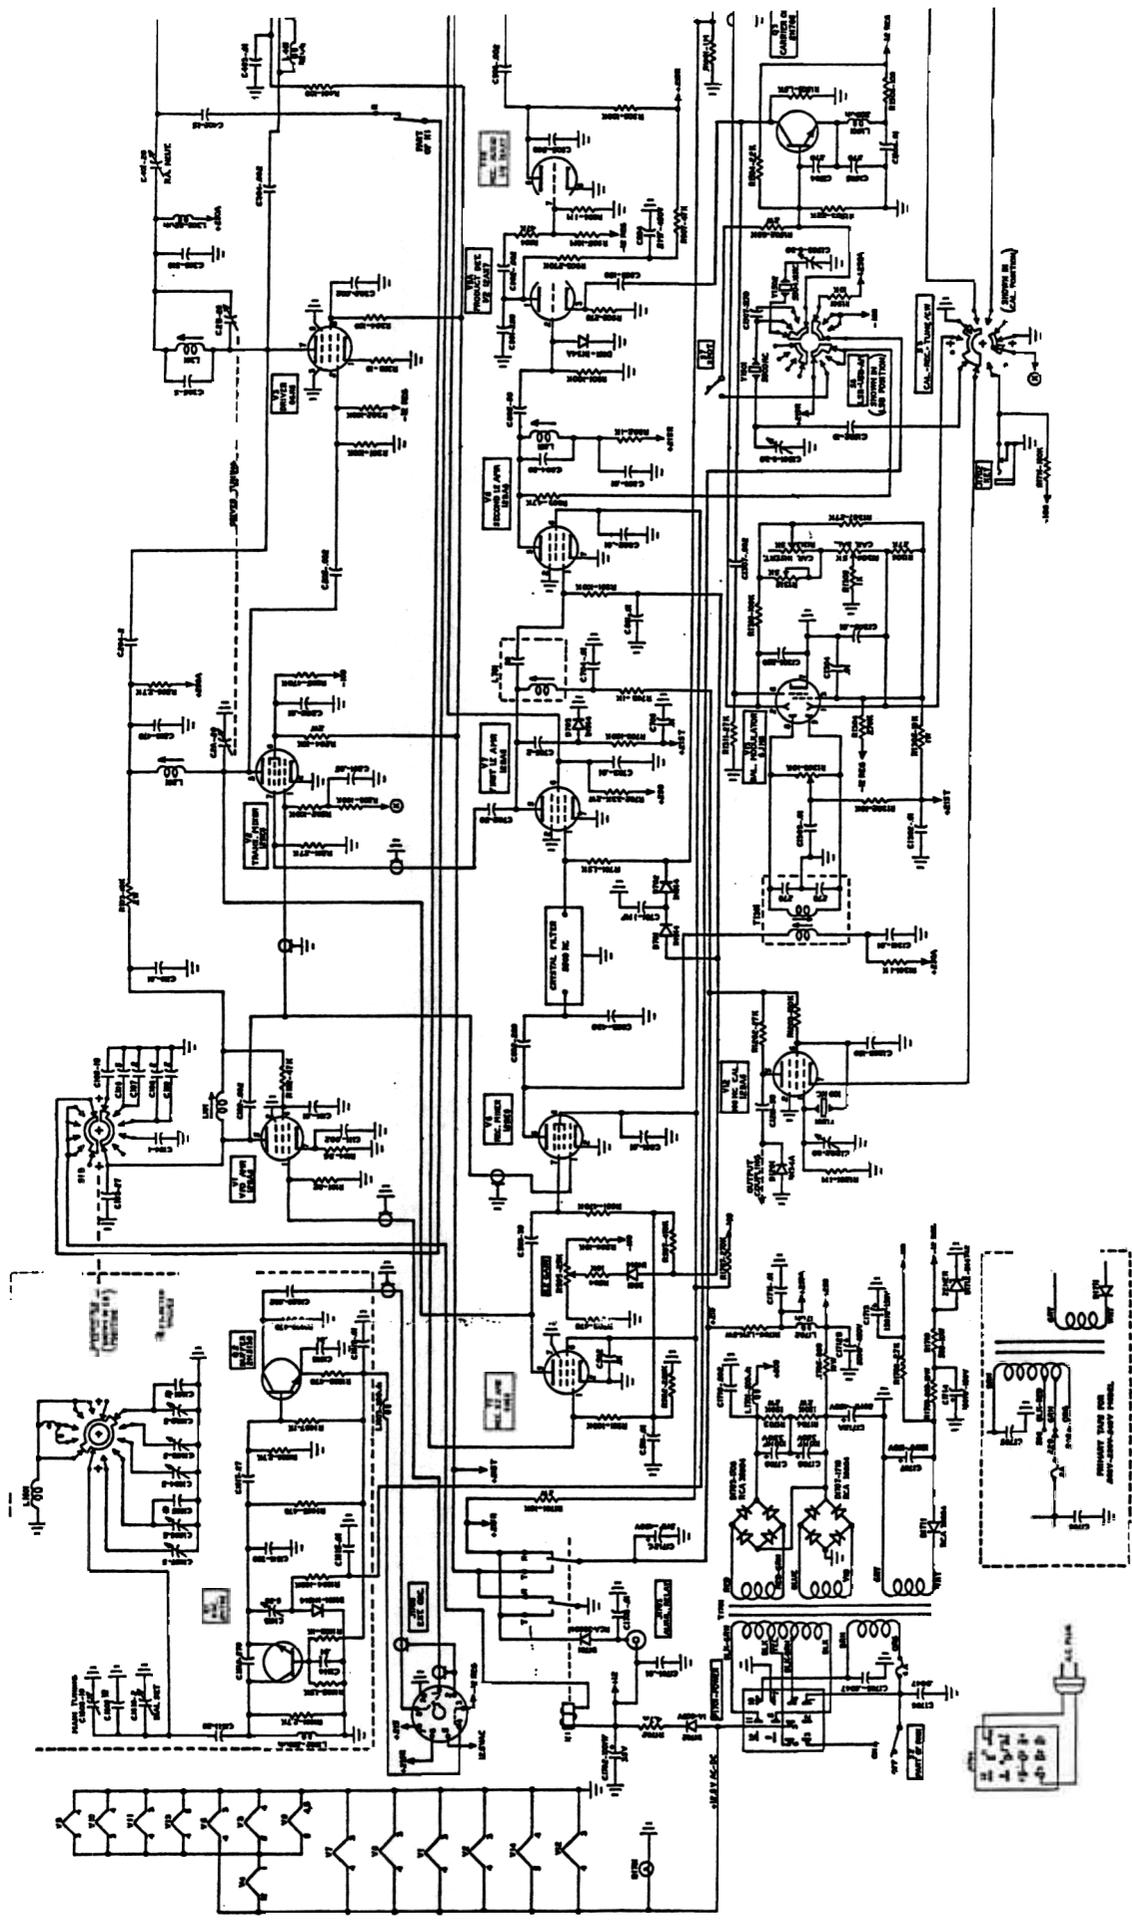

1

2

3

4

5

6

7

8

9


10


11

12

13

14

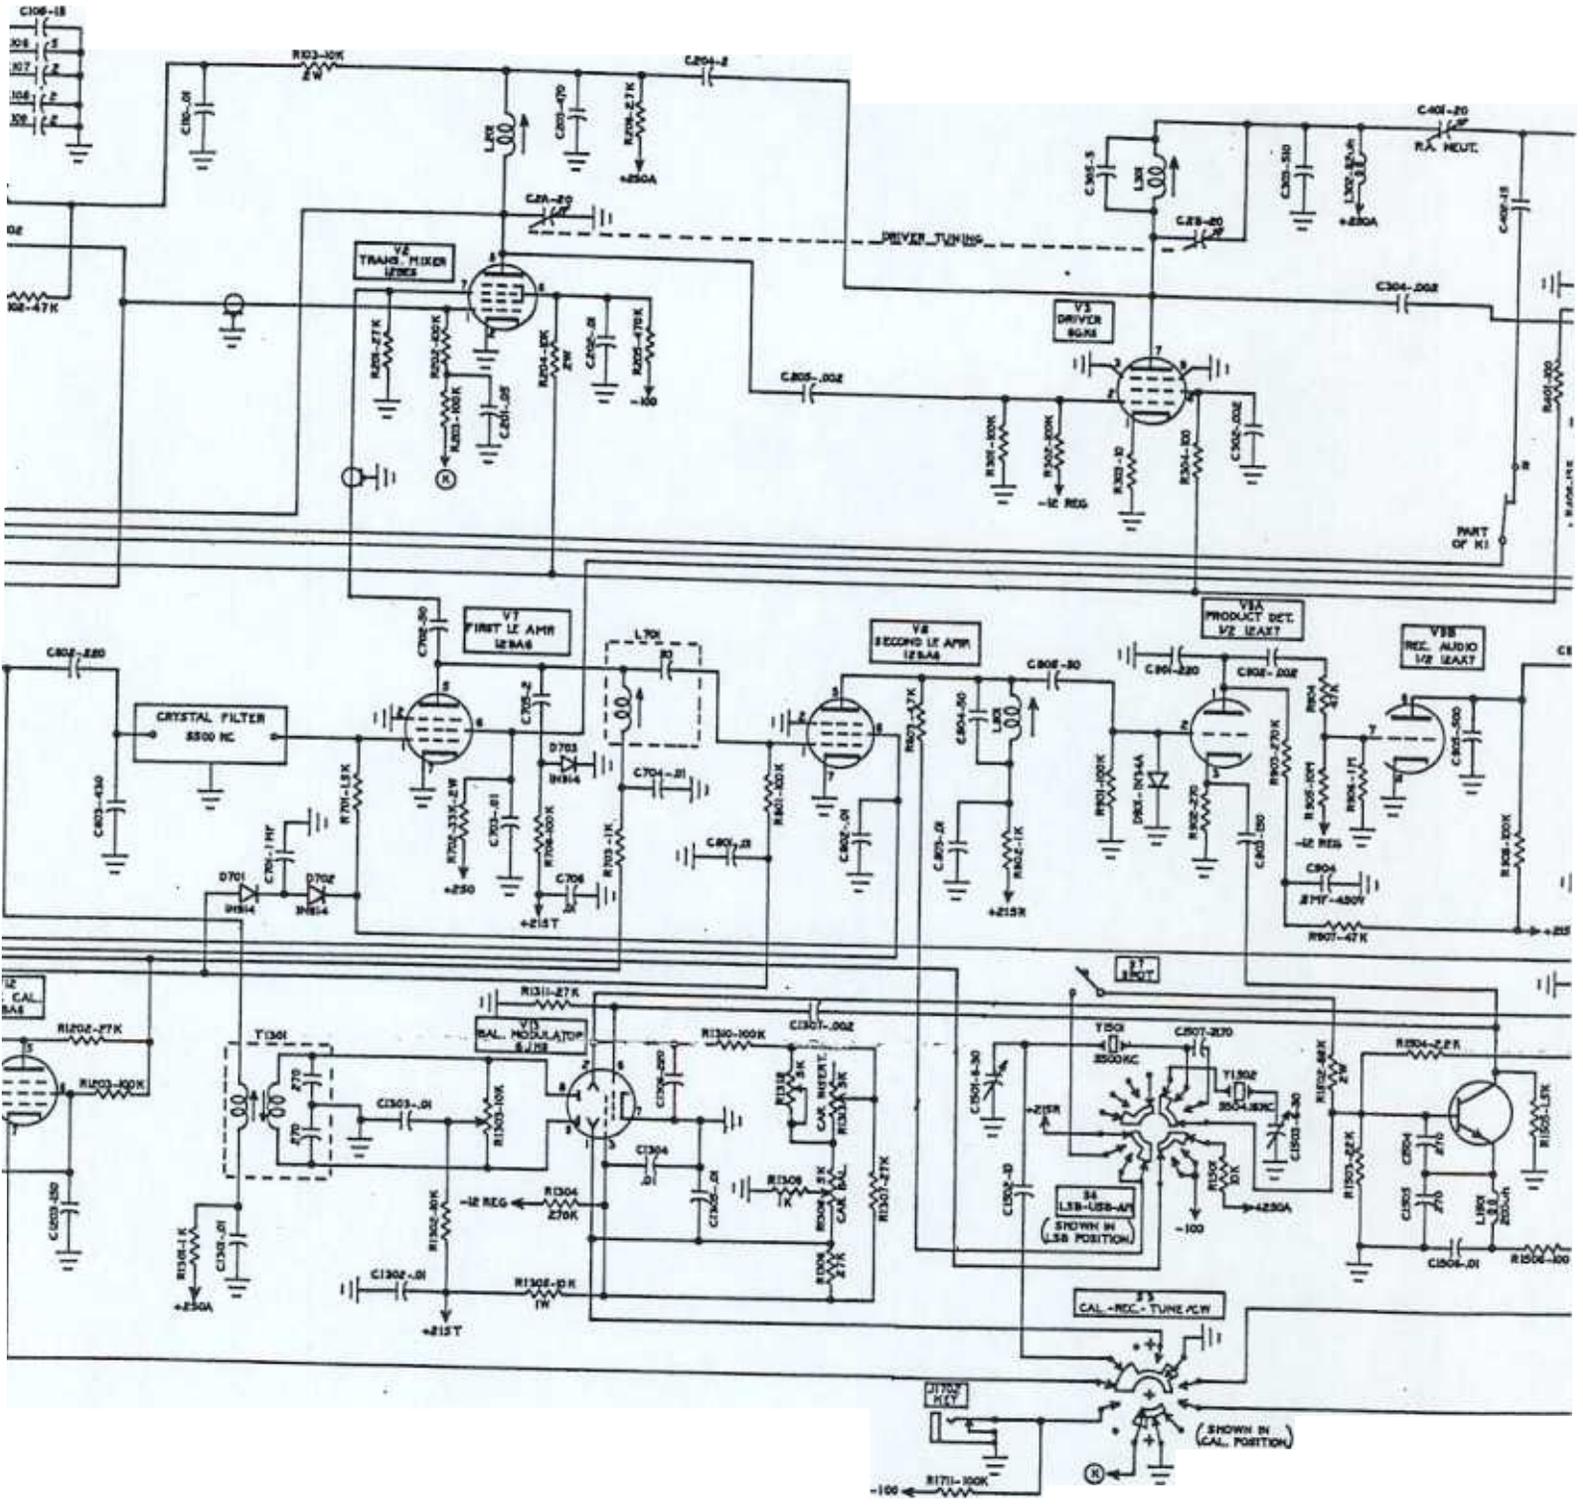

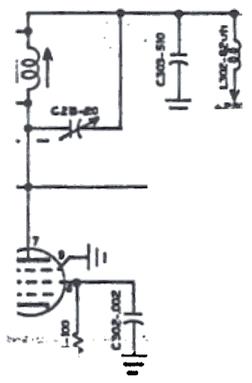

R400-100

